



## Experience report adhesive tapes

### 1. Tested adhesive tapes

○○○ no adhesion

●○○ bad adhesion


●●○ moderate adhesion

●●● good adhesion

Adhesive tape		Surface		
Producer	Product	Concrete (painted)	Plastered	Wallpaper
Roxolit	Mirror mounting tape	●●●	●○○	●●○
Roxolit	Mounting tape transparent	●●●	●●○	●●○
Roxolit	Mounting tape white	●○○	○○○	○○○
Tesa	Mounting tape for masonry, stone	●●●	●●●	●●●
Tesa	Mounting tape outdoor	○○○	●●●	●●○
Tesa	Mirror mounting tape	●●●	●●●	●●●
Tesa	Mounting tape ultra strong	○○○	○○○	●○○
Hammersmith	Monster tape	●●●	●●○	●●○

### 2. My tools

- Yardstick
- Pencil
- spirit level
- Circular saw
- Protective equipment
- Cleaning cloth

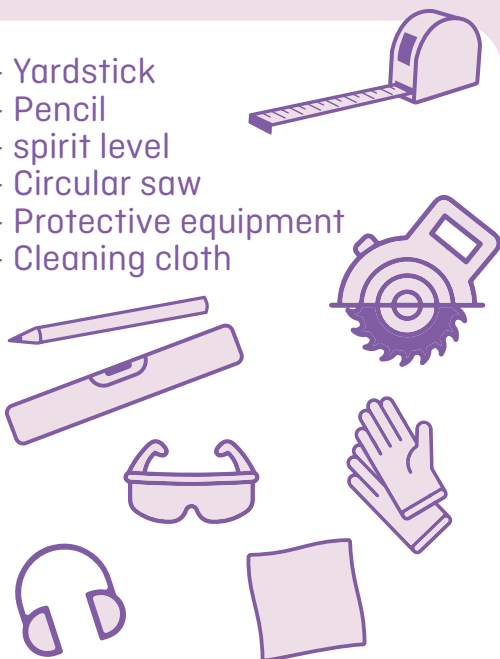


### 3. Application

#### With tape


Apply to the back and press on firmly. Please use gloves.

**First panel** min. 6 x 10 cm adhesive tape, others min. 3 x 20 cm.

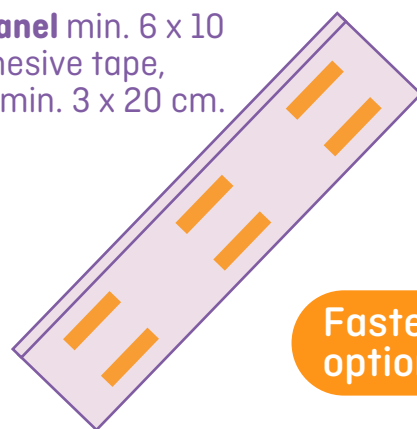

Fastest option

#### Not suitable for ceiling mounting!

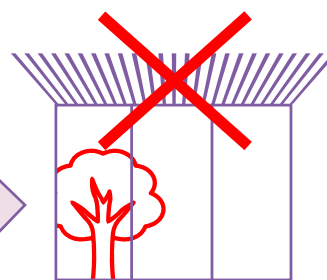

### 4. Important!

The adhesive tape must be selected to suit the substrate and the ambient conditions. Seek advice from trained personnel.

Ensure that the walls are **stable, even, clean and dust-free**. Remove any residue and unevenness.




### 5. Further information

How big is my area and how much do I need? Allow for 10 % offcut.

- 2 m<sup>2</sup> = 1** Box
- 5 m<sup>2</sup> = 3** Boxes
- 15 m<sup>2</sup> = 9** Boxes
- 20 m<sup>2</sup> = 12** Boxes

For unlevel, cold external walls and where cable runs are required a rear-ventilated substructure is recommended.  
Jump dimension: **max. 65cm**

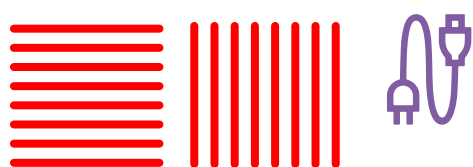

Can be installed horizontally or vertically.

#### Attention!

Not suitable for high temperature fluctuations and humidity! [e.g. wood-burning stoves, damp rooms or conservatories]

